


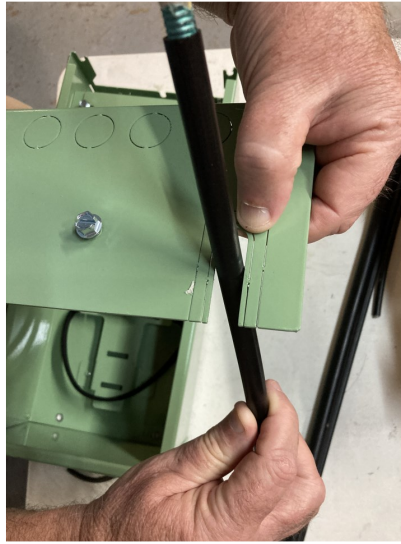

Installation Instructions:

Note: If you have round knockouts in the removable baseplate, it is best **not** use them as it will prevent you from adding cables in the future. Those have been removed in later versions of this product.

The bulkhead plate is provided in case the application involves pre-connectorized drops. It can be discarded or left in place.

1. For all cables in and out, choose from the six knockout **slots** in the rear section of the removable baseplate. Based on cable diameter, carefully remove inner and/or outer knockout with **needle nose** pliers.
2. Install desired cables into fiber box, securing to the fixed plate at rear with cable ties. Slide bottom plate into box and tighten with can wrench.
3. Silicone seal is recommended at cable entries.

